

## Service plan Boxer / Ducato / Jumper


**Serial III, manufacturing date from 06/2007 : from transformation Nr 5000004**

### GEARBOX

Quantity : same as basis vehicle = 3 litres  
 Oil : same as basis vehicle  
 Level : no level plug, in case of appearant leaks, empty to check.  
 Oil change : please see the constructor's instructions

### FRONT TRANSFER BOX

Quantity: 0.45 litre  
 Oil: **YACCO BVX LS200, or equivalent to 80W90 according to the API GL5 ZF TE ML-05C norm**  
 Level: The filling plug does not show the level, in case of apparent leaks, empty to check.  
 Oil change:  
 → 12 / 2011 oil change every 20.000 km – **1st oil change between 1.500 and 2.500 km**  
 -----  
 01 / 2012 → oil change every 24.000 km or 2 years in normal use or every 18.000 km or 1 year when intensive use is made - **1st oil change between 1.500 and 2.500 km**

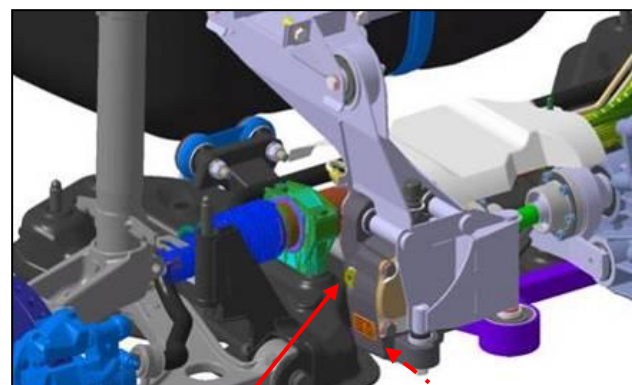


Filling

Empty

### REAR TRANSFER BOX

Quantity : 0.50 litre  
 Oil : **YACCO BVX LS200, or equivalent to 80W90 according to the API GL5 ZF TE ML-05C norm**  
 Level : **The filling plug does not show the level**, in case of apparent leaks, empty to check.  
 Oil change:  
 → 12 / 2011 oil change every 20.000 km – **1st oil change between 1.500 and 2.500 km**  
 -----  
 01 / 2012 → oil change every 24.000 km or 2 years in normal use OR every 18.000 km or 1 year when intensive use is made - **1st oil change between 1.500 and 2.500 km**

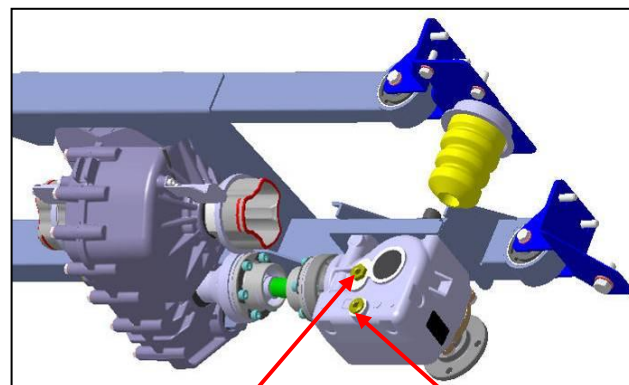

Filling

Empty


## REAR AXLE

Quantity 1.2 litres  
Oil YACCO BVX LS200, equivalent to 80W90  
according to norm API GL5 ZF TE ML-05C

Level **The filling plug does not show the level**, in case of apparent leaks, empty to check.

Oil change  
→ 12 / 2011 oil change every 20.000 km – **1st oil change between 1.500 and 2.500 km**

01 / 2012 → oil change every 24.000 km or 2 years in normal use or every 18.000 km or 1 year when intensive use is made - **1st oil change between 1.500 and 2.500 km**

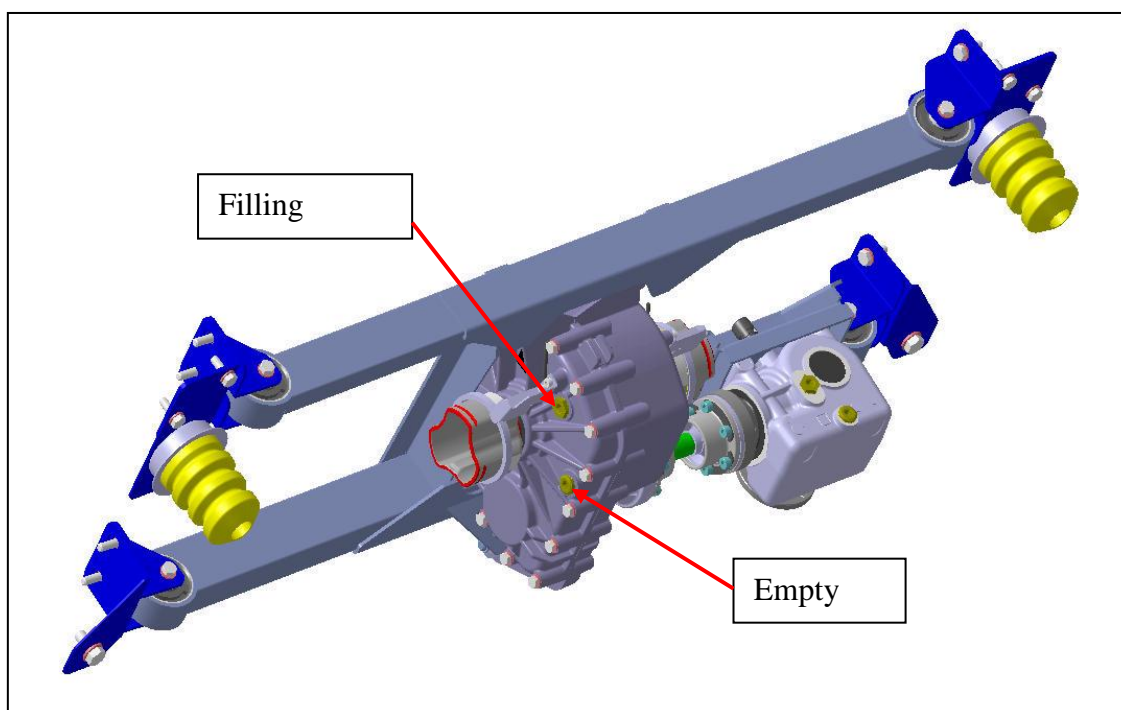

**Note:** After the replacement of a rear axle or a transfer box by a new part, the 1st oil change between 1500 and 2500 km is compulsory.

**Nota:** it is compulsory to grease the sliding transmission once a year or during all services.